

[illegible]

Call 811 or visit [sunshine811.com](http://sunshine811.com) two full business days before digging to have buried facilities located and marked.

Check positive response codes before you di

PROJECT No.:	F25000
DRAWN BY:	CA
CHECKED BY:	MA
DATE:	02/24/202
CAD I.D.:	F250001-PMS PLA

PROJECT

**980 SW 12th AVE.  
POMPANO BEACH**

FOR  
**JOEFRAN  
INVESTMENTS, LLC**

POMPANO BEACH  
FLORIDA



6300 NW 31ST AVENUE  
FORT LAUDERDALE, FL 33309  
PH: (954) 202-7000  
FX: (954) 202-7070  
[www.ThomasEngineeringGroup.com](http://www.ThomasEngineeringGroup.com)

RYAN OSCAR THOMAS

**PROFESSIONAL ENGINEER**  
FLORIDA LICENSE No. 53891





November 3, 2025  
FLORIDA BUSINESS CERT. OF AUTH. No. 2752

SHEET TITLE:

**PAVEMENT MARKING  
&  
SIGNAGE PLAN**

SHEET NUMBER

**C-10**

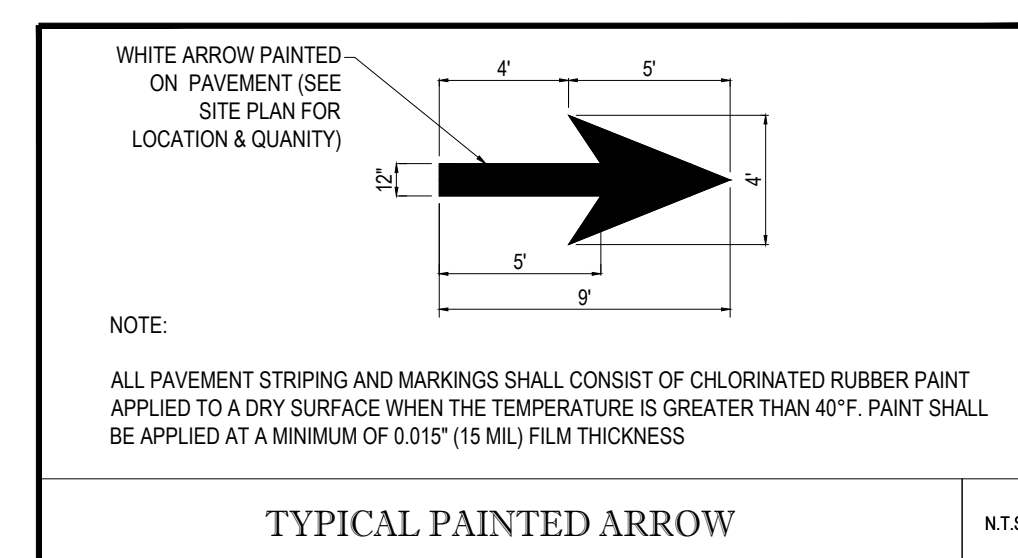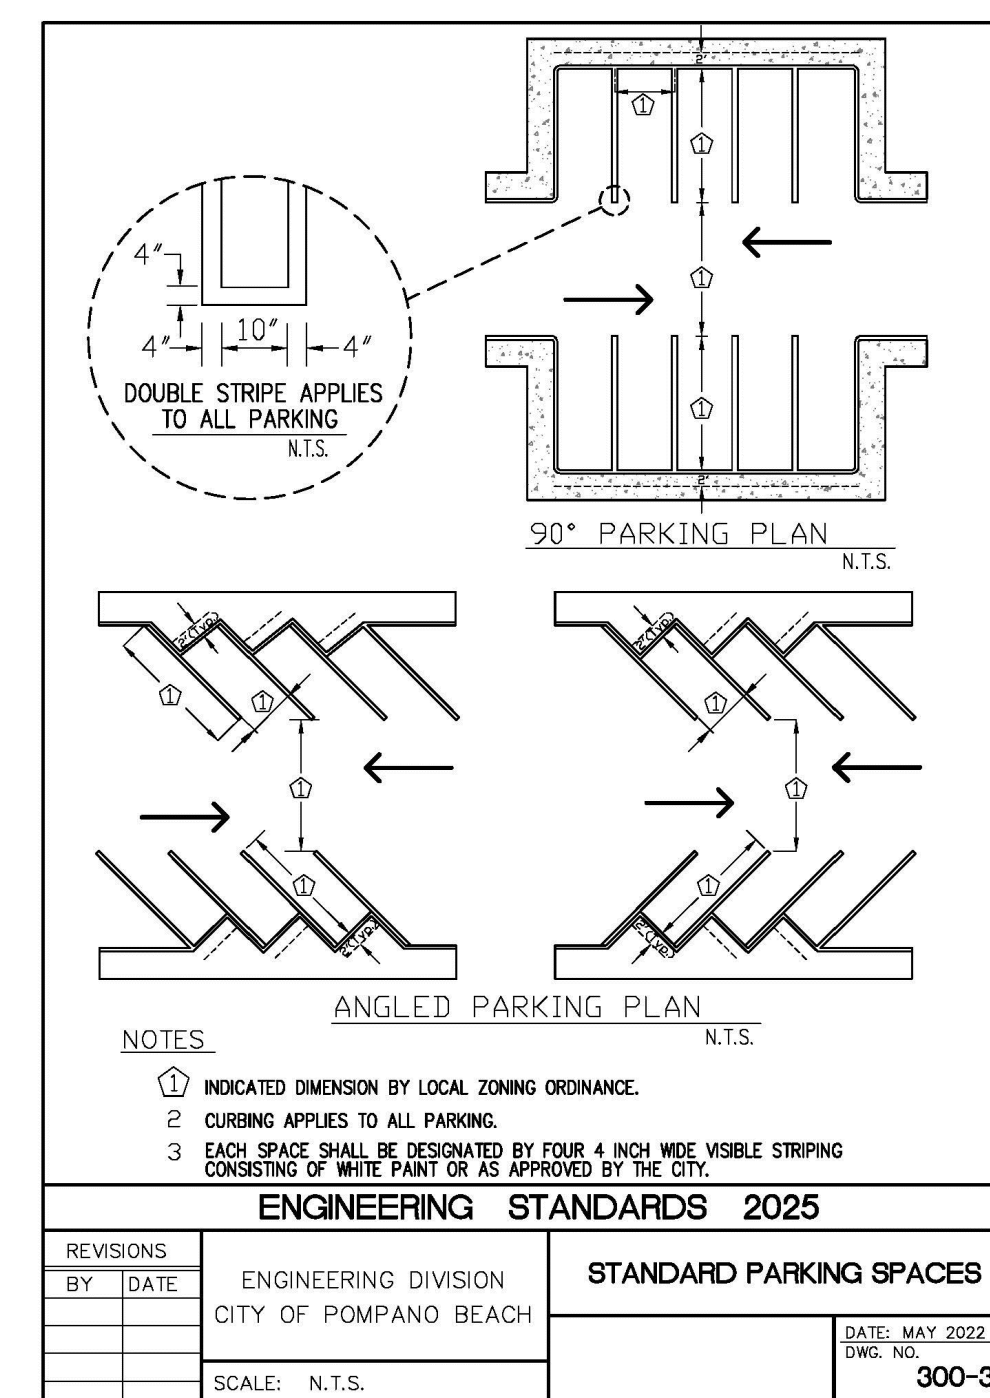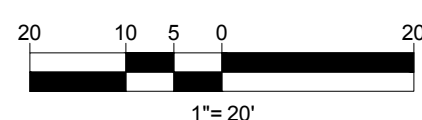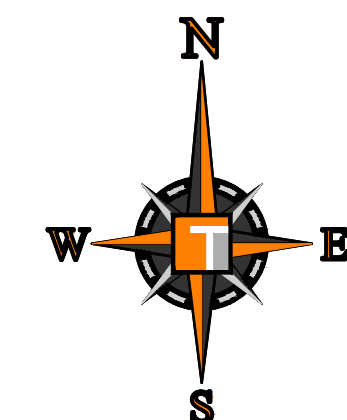

## LEGEND

R1-1	STOP SIGN (30" x 30")
R5-1	DO NOT ENTER
DY	DOUBLE YELLOW
W	WHITE
*	THERMOPLASTIC